

Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

2191 Mendenhall Dr. Suite 105
 North Las Vegas, NV 89031
 TEL: 702-399-1423
 FAX: 702-399-1431
 8am-5pm Pacific Time
 Monday through Friday

Website Address
<http://www.dynojet.com>

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.




2155HA.001

High Altitude Only

1994-97 Kawasaki ZX-9R

Stage 1

For mildly tuned machines using the stock airbox, with stock or K&N filter. May also be used with a good aftermarket exhaust system
 K&N filter #KA-0011

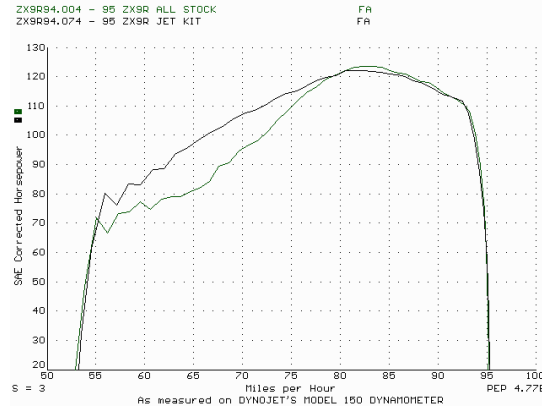

This graph shows a typical gain with a Dynojet jet kit.

WARNING

**NO SMOKING!
 NO OPEN FLAME!
 WHILE INSTALLING
 YOUR DYNOJET KIT**

4	Main Jets	DJ170
4	Main Jets	DJ180
4	Fuel Needles	DNO234
1	Slide Drill	DD #40
4	Slide Springs	DSP006
8	Adjusting Washers	DW0001
4	E-Clips	DE0001
4	Main Air Correctors	DCO201
1	Tool	DT001
1	Plug Drill	DD #5/32
1	Screw	DS0001

STAGE ONE INSTRUCTIONS

DYNOJET
2155HA.001

1. Remove the vacuum slide from the carbs. Remove the stock needles & spacers, noting the order of assembly.
2. Using the drill provided (DD# 40) drill an auxiliary lift hole in the position of the x in (Fig. A). If you would rather not drill the extra hole that is fine, but you will not get as big as performance gains out of this kit.
3. Install the Dynojet needles on groove #3 from the top, using all stock spacers. Install the Dynojet washers (2 for each needle) above the E-clip. Install the Dynojet slide springs provided, in place of the stock slide springs.
4. Remove the velocity stack plate and locate the main air jet passage (Fig. B). With the flat end facing into the carb, install the main air correctors (DCO201) provided. Use the tool (DT001) provided to tap lightly in place. With the glue provided lightly touch a dab on the outer edge of the air corrector. Allow glue to dry.
5. Remove stock main jets and replace with Dynojet main jets provided. If you are running the stock exhaust use the DJ170 main jets, if you are running an aftermarket header or slip-on with high flowing baffle, use the DJ180 main jets. Be sure that the jets you are changing are the main jets.
6. Locate the fuel mixture plug (Fig. C), if you see a screw head, proceed to adjusting procedure. With the DD #5/32 drill bit provided, carefully drill thru the plugs. Note: the mixture screw is directly underneath this plug, be ready to pull back on the drill the instant you break thru. Use screw provided to secure and remove the plug. Carefully turn mixture screws clockwise until they seat, turn out 2-1/2 turns.

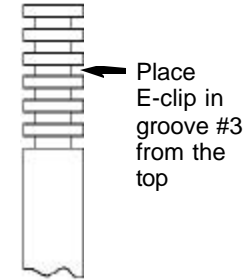


Fig. A

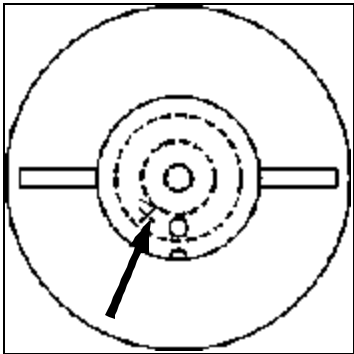


Fig. B

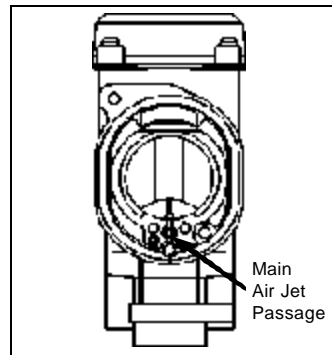


Fig. C

